

HOW TO USE THIS MANUAL

This service manual describes the service procedures for the TRX350.

Follow the Maintenance Schedule (Section 4) recommendations to insure that the vehicle is in peak operating condition and emission levels are within the standards set by the California Air Resources Board (CARB).

Performing the first scheduled maintenance is very important. It compensates for the initial wear that occurs during the break-in period.

Sections 1 and 4 apply to the whole motorcycle. Section 3 illustrates procedures for removal/installation of components that may be required to perform service described in the following sections. Sections 5 through 23 describe parts of the motorcycle, grouped according to location.

Find the section you want on this page, then turn to the table of contents in the first page of the section.

Most sections start with an assembly or system illustration, service information and troubleshooting for the section. The subsequent pages give detailed procedures.

If you are not familiar with this vehicle, read the Technical Features in section 2.

If you don't know the source of the trouble, go to Section 24, troubleshooting.

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual. Of course, it is not practical or possible to warn you about all the hazards associated with servicing this vehicle. You must use your own good judgement. You will find important safety information in a variety of forms including:

- Safety Labels – on the vehicle
- Safety Messages – preceded by a safety alert symbol  and one of three signal words, DANGER, WARNING, or CAUTION. These signal words mean:

▲ DANGER You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.

▲ WARNING You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

▲ CAUTION You CAN be HURT if you don't follow instructions.

- Instructions – how to service this vehicle correctly and safely.

As you read this manual, you will find information that is preceded by a **NOTICE** symbol. The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.

	GENERAL INFORMATION	1	
	TECHNICAL FEATURES	2	
	FRAME/BODY PANELS/EXHAUST SYSTEM	3	
	MAINTENANCE	4	
ENGINE AND DRIVE TRAIN	LUBRICATION SYSTEM	5	
	FUEL SYSTEM	6	
	ENGINE REMOVAL/INSTALLATION	7	
	CYLINDER HEAD/VALVE	8	
	CYLINDER/PISTON	9	
	CLUTCH/GEARSHIFT LINKAGE	10	
	ALTERNATOR/STARTER CLUTCH	11	
	CRANKCASE/TRANSMISSION/CRANKSHAFT	12	
	CHASSIS	FRONT WHEEL/SUSPENSION/STEERING	13
		REAR WHEEL/SUSPENSION	14
BRAKE SYSTEM		15	
FRONT DRIVING MECHANISM (FM/FE model)		16	
REAR DRIVING MECHANISM		17	
ELECTRICAL	BATTERY/CHARGING SYSTEM	18	
	IGNITION SYSTEM	19	
	ELECTRIC STARTER	20	
	LIGHTS/METERS/SWITCHES	21	
	ELECTRIC SHIFT PROGRAM (ESP: TE/FE model)	22	
	WIRING DIAGRAMS	23	
	TROUBLESHOOTING	24	
	INDEX	25	