



## FRONT WHEEL/SUSPENSION/STEERING

Check the steering shaft for distortion or damage.

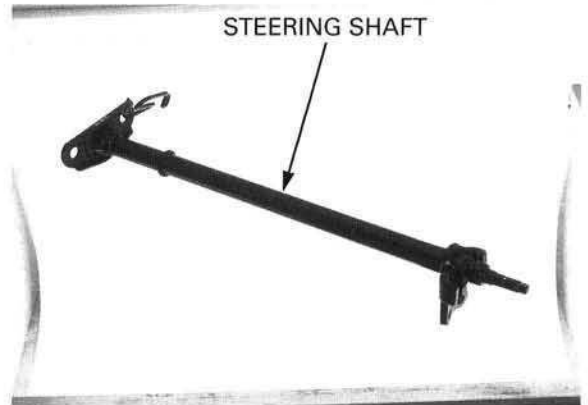


Turn the inner race of steering shaft bearing with your finger.  
The bearing should turn smoothly and quietly.  
Also check that the bearing outer race fits tightly in the frame.  
Remove and discard the bearing if the race does not turn smoothly and quietly or if it fits loosely in the frame.

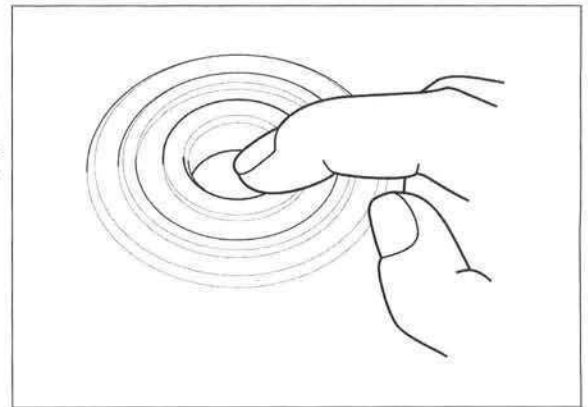

### BEARING REPLACEMENT

Remove the dust seals.

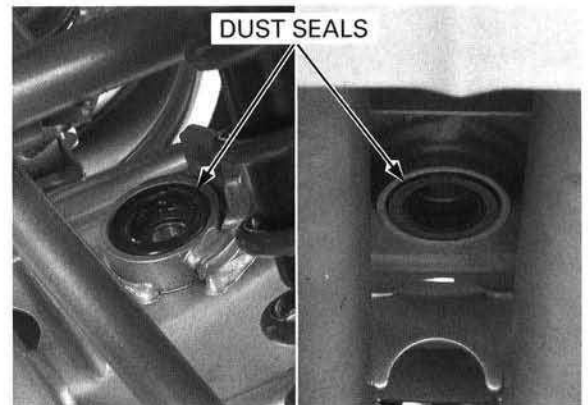

Remove the snap ring.

Drive the steering shaft bearing out of the frame from the lower side.

