

6. Throttle Body


- Located between the rubber air box boot and rubber cylinder head adaptor.

7. Throttle Position Sensor (TPS)

- Located on the right-hand side of the throttle body below the IAC motor.


8. Idle Air Control Motor (IAC)

- Located on the upper right-hand side of the throttle body above the TPS.

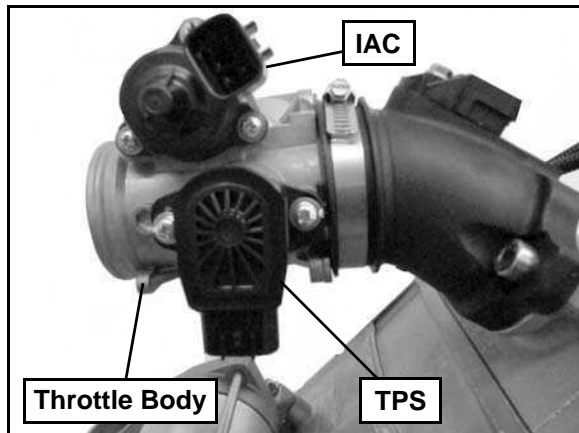

9. Camshaft Phase Sensor


- Located in the engine block above the oil filter. The sensor can be accessed through the right rear wheel well.

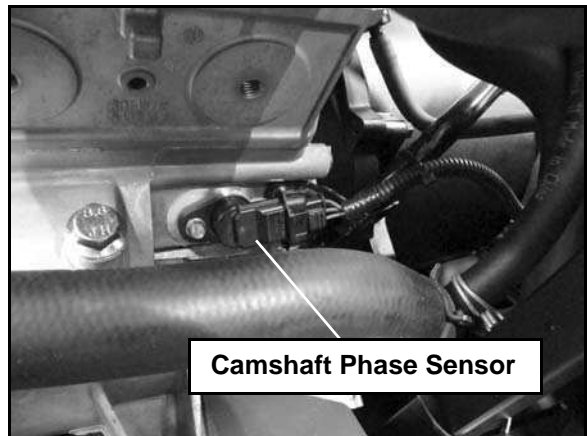

4

10. Engine Coolant Temperature Sensor (ECT)

- Located in the cylinder head next to the thermostat housing. The sensor can be accessed with the rear service panel removed.

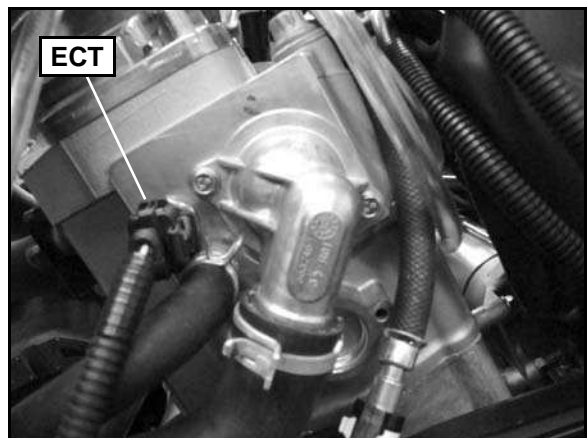

11. Ignition Coil

- Located behind the rear service panel just above the outer PVT cover.

